

VI.5.3D-PRLASTDY PROGRAM FCST HCL TECHNIQUE PRLASTDY

Purpose

Technique PRLASTDY sets whether Preprocessor Component data will be printed for all days in the run or whether only the last observed data day plus any future days will be printed.

Valid values are NO (0) and YES (1).

The Global default is NO (0).

This Technique is Universal.

Form of Input

PRLASTDY(integer)

where integer is 1 or 0 specifying whether or not to only print data for the last observed data day plus future days from the Preprocessors.

Example

PRLASTDY(1)

The Preprocessors will only print data for the last observed data and all future days.